




Remote Slide Valve - Set Up

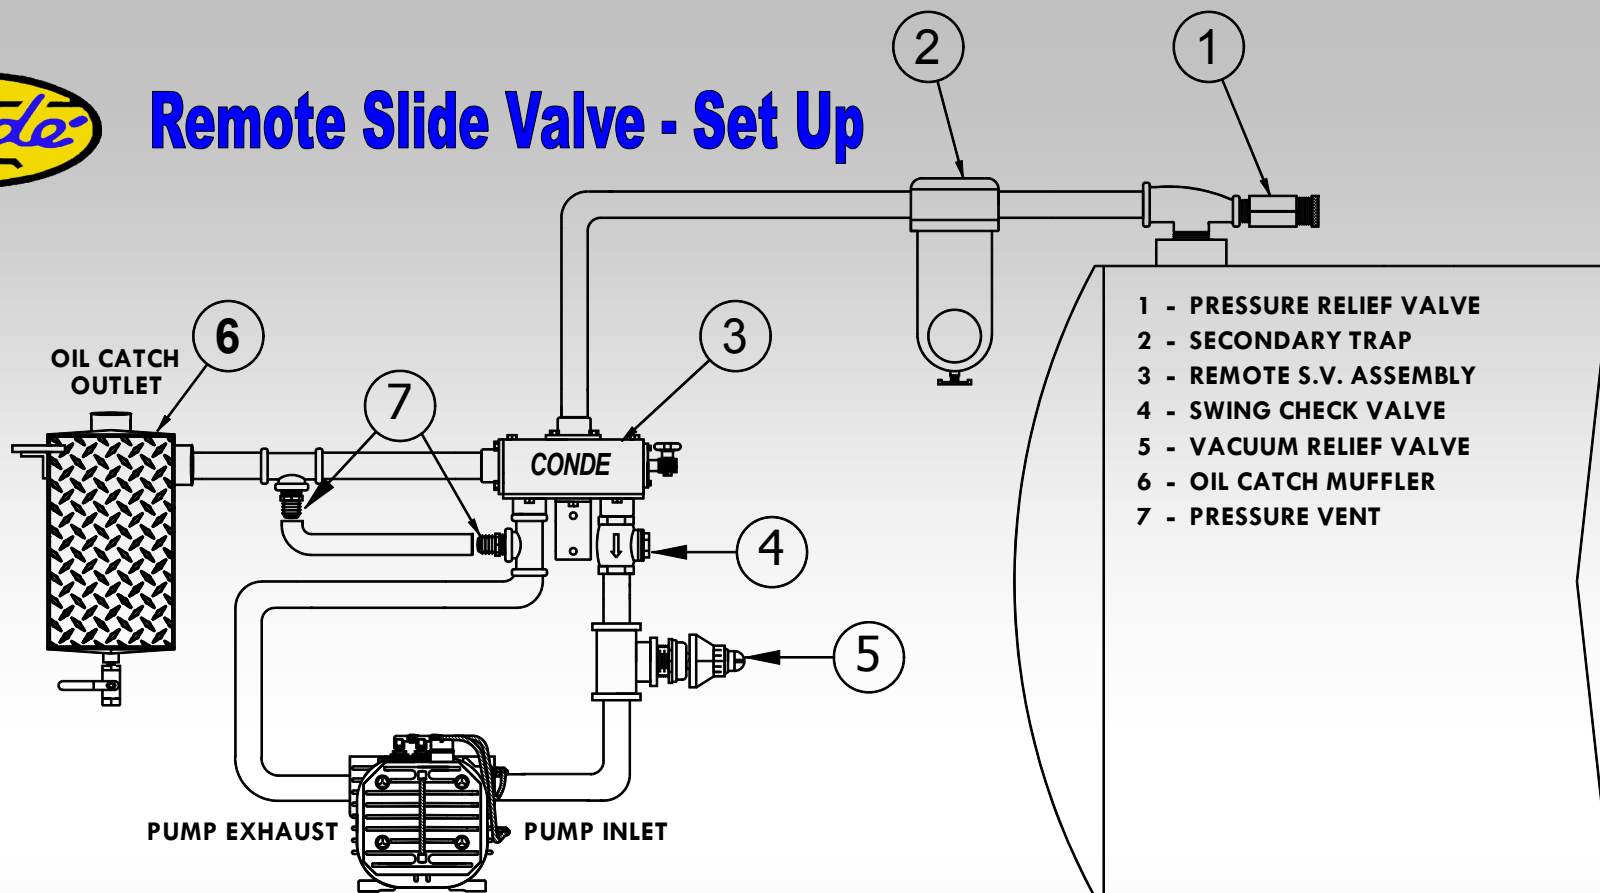

NOTE: ALWAYS INSTALL PRESSURE RELIEF VALVE

ONLY USE A VACUUM / PRESSURE RATED HOSE FOR THE REMOTE S.V. INSTALLATION

S.V.HANDLE PULLED OUT - VACUUM POSITION

S.V.HANDLE PUSHED IN - PRESSURE POSITION

WHEN S.V. HANDLE @ DESIRED POSITION - TIGHTEN HANDLE LOCKING KNOB

PRESSURE VENT:

ALLOWS TANK PRESSURE TO BLEED OFF - IF PUMP SHUT OFF IN PRESSURE MODE